




RS485 / USB Converter


Connect up to 12 meters, with RS-485 communication, directly to an on-site PC.

Connect the “Intelligent Converter”, able to connect up to 255 meters to an on-site PC, which may not have a 9 pin Serial Comm. port.


RS-485 / USB Converter comes with installation manual and driver software which Installs using Windows™ “Install Wizard”.

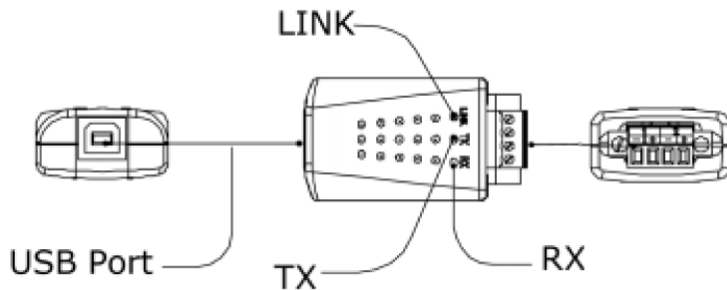

▪ RS-232 PIN FUNCTION

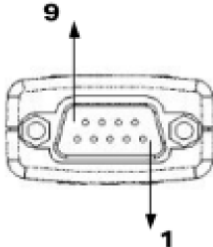	PIN No.	I/O	DESCRIPTION
	1	I	Data carrier detect
2	I	Received data	
3	O	Transmitted data	
4	O	Data terminal ready	
5	X	Signal ground	
6	I	Data carrier	
7	O	Request to send	
8	I	Clear to send	
9	I	Positive dc TEST	

▪ RS-485 PIN FUNCTION

	PIN		DESCRIPTION
	Tx	-	RS-485 -
+		RS-485 +	
Rx	-	RS-485 -	
	+	RS-485 +	